

ARCWEISSO

RECHARGEABLE WALL LAMP



WX-12


Assembly and User Manual

SAFETY AND SPECIFICATIONS



SAFETY

- Read all instructions before installation and use.
- For indoor use only.
- Keep away from water and excessive moisture.
- Use fixing hardware suitable for the wall material.
- Secure the wall bracket before attaching the lamp.
- Use a compatible USB Type-C charging source.
- Do not disassemble, modify, or drop the product, or expose it to excessive heat.
- Do not mount on Plaster / Gypsum wall
Do not mount on Thin wall

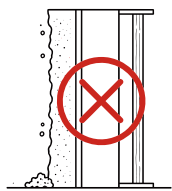

Plaster / Gypsum wall



Thin wall



SPECIFICATIONS

Model: WX-12

Power: 5 W

Charging input: USB Type-C

Light modes: RGB, warm white, natural white, cool white

Timer: 30, 60, 120 minutes

PARTS




A x 1

Rechargeable dome
light module
(white dome, USB-C port)




B x 1

attachment pad

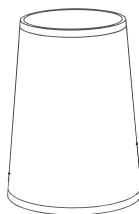

C x 1

Fabric lampshade

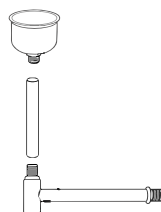

D x 1

Upper lamp assembly
(cup, upper rod, T-joint,
and wall arm)



E x 1

Long lower rod



 
F x 1

Decorative finial



G x 2

Canopy fixing screws




H x 1

Round wall canopy




J1 x 1

 Wall bracket



X x 1

 Center locking hardware




J2 x 1

Wall bracket



K x 1

 Remote control



L x 2


Wall screws and plugs





V x 1

Washer

INSTALL WALL BRACKET

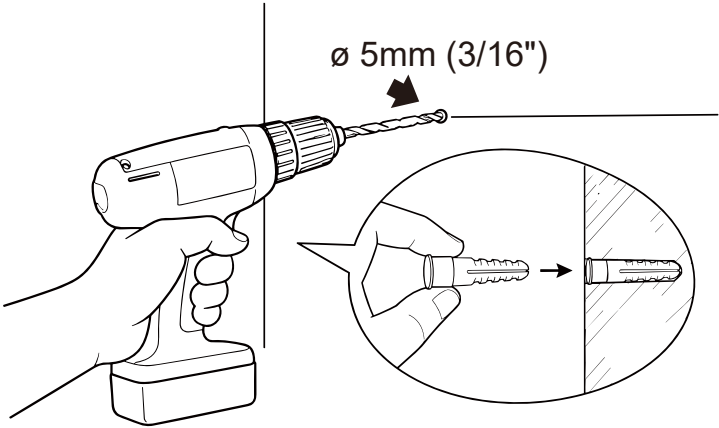


J1

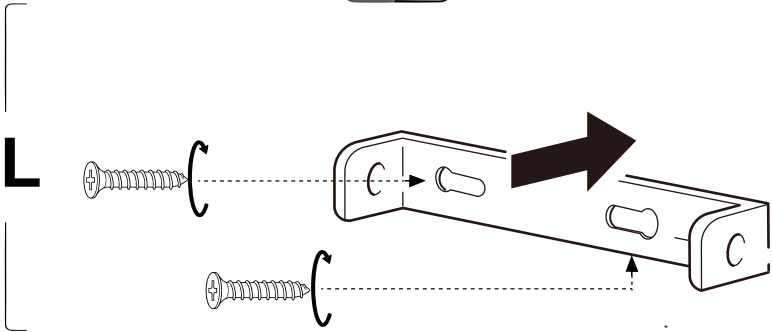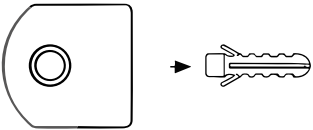


Step 2

ASSEMBLE LAMP BODY

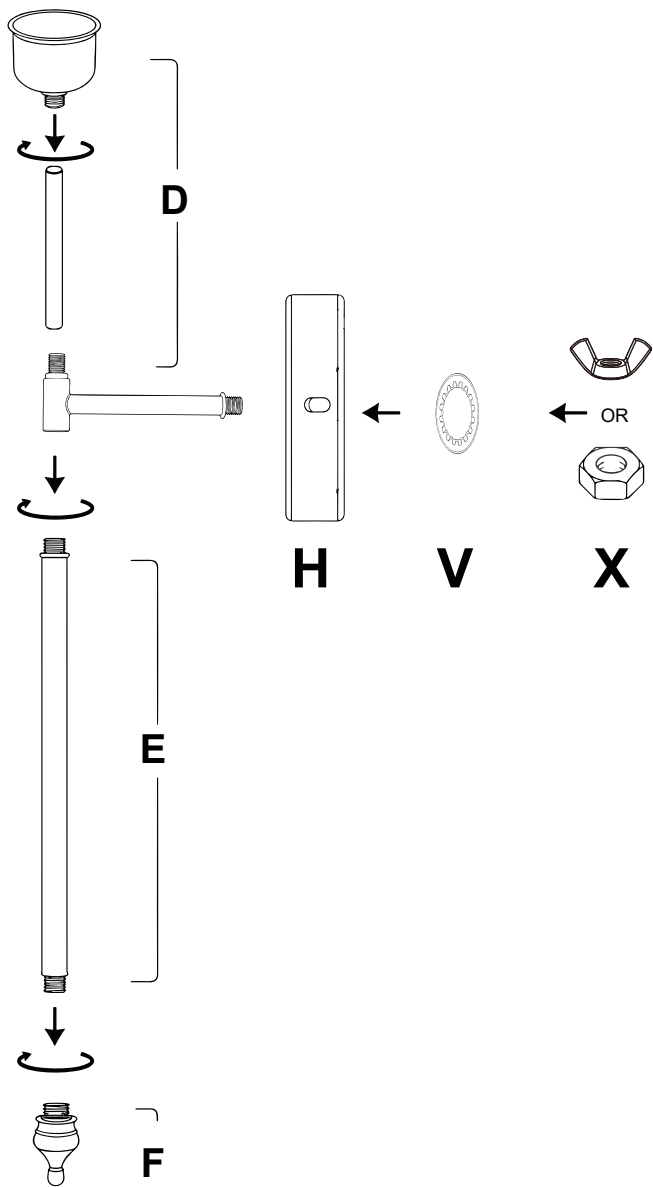

Step 3





ATTACH LAMP TO WALL

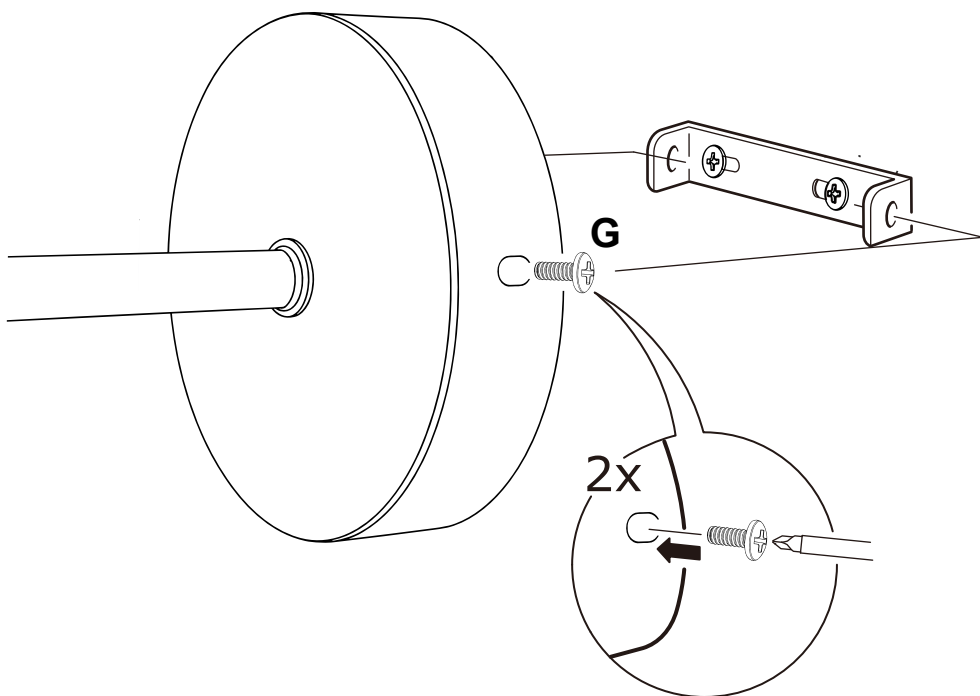

Step 4

INSTALL LAMPSHADE


C

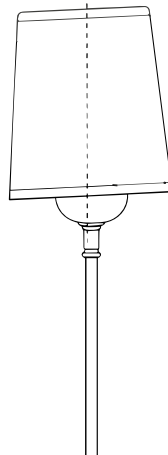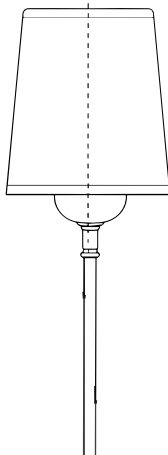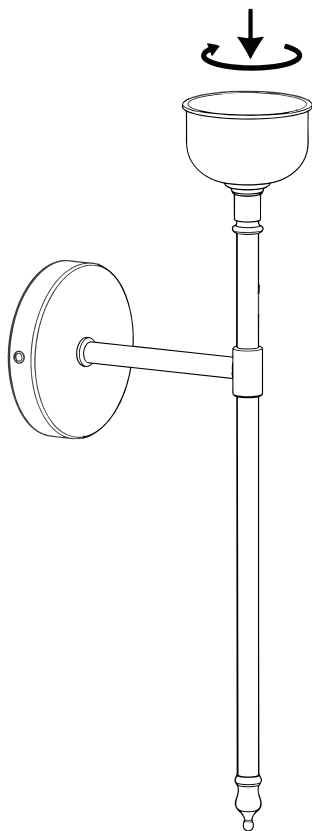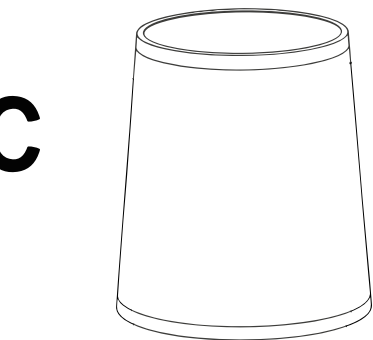

Step 5

CHARGE AND INSTALL LIGHT MODULE

A

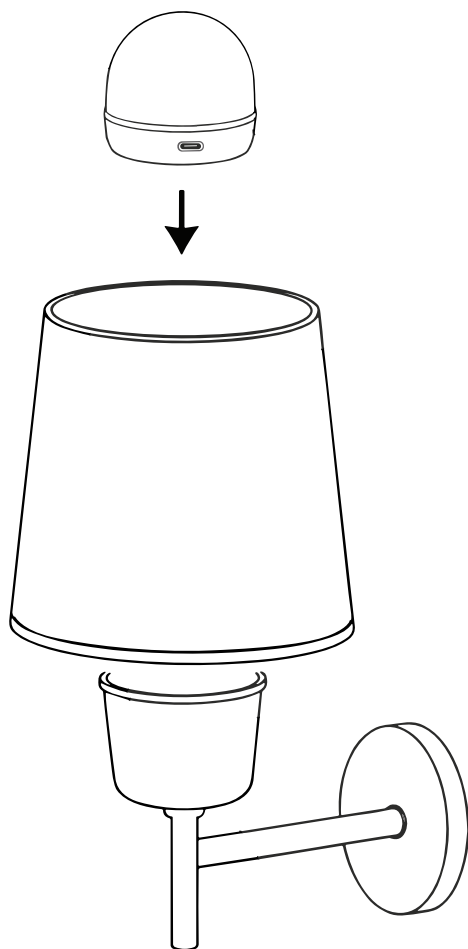


REMOTE CONTROL



REMOTE FUNCTIONS


	ON	Turn on
	OFF	Turn off
	Brightness Up	Adjust brightness
	Brightness Down	Adjust brightness
	30MIN	Automatic shutoff
	60MIN	Automatic shutoff
	120MIN	Automatic shutoff
	SMOOTH	Smooth color transition
	FLASH	Rapid color change
	WW	Warm white
	NW	Natural white
	CW	Cool white
	R	Red
	G	Green
	B	Blue
	Lower color buttons	Direct color selection

FINAL CHECK AND TROUBLESHOOTING

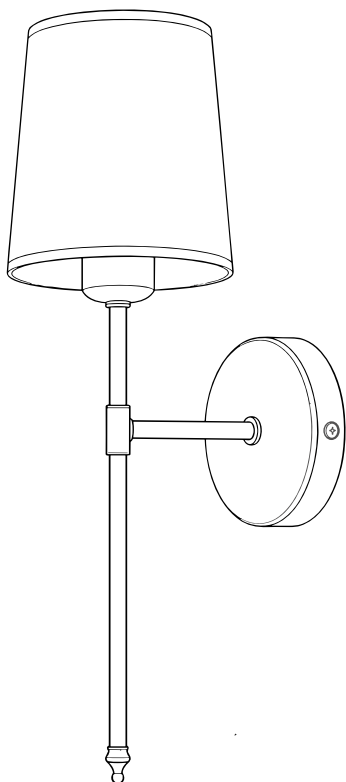


Remote does not respond

Point the remote directly at the lamp and remove any obstacles.

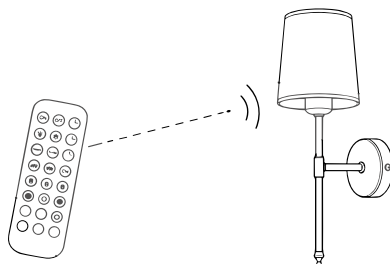


Wall fixture feels loose

Stop using it and retighten the mounting hardware.

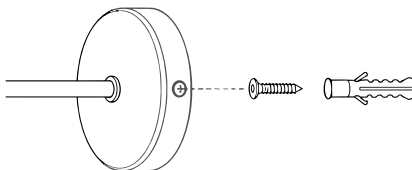

If the problem persists, contact customer service for assistance.

12 CARE

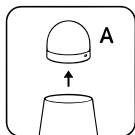


Disconnect A before cleaning.




Wipe with a soft, dry cloth.



Do not use abrasive cleaners.

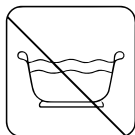


Do not immerse any part in water.

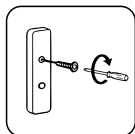


Check the wall mounting regularly.



Keep this manual for future reference.

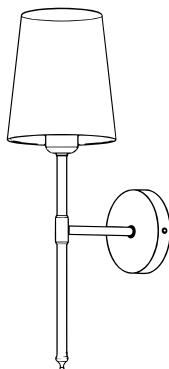


REMOTE BATTERY PRECAUTIONS

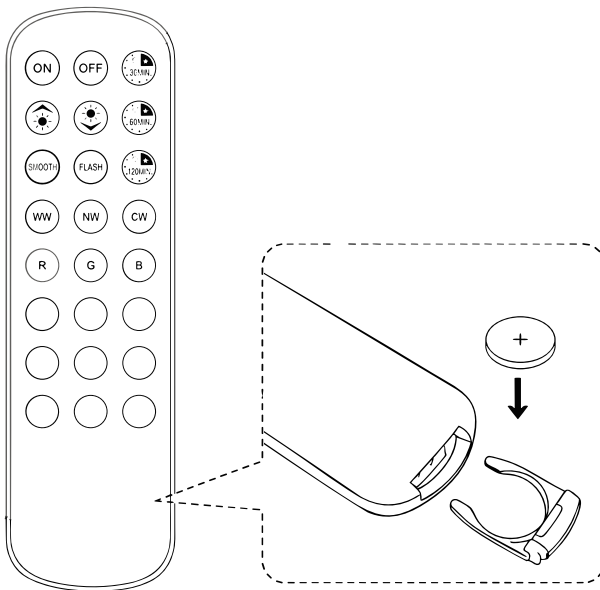

- Use only the coin cell battery type marked inside the remote control's battery compartment.
- Insert the battery with the correct polarity (+ / -).
- Keep the battery away from children and pets.
- If a coin cell battery is swallowed, it can cause serious injury or death. Seek medical attention immediately.
- Do not recharge, short-circuit, disassemble, crush, puncture, or expose the battery to heat or fire.
- Remove the battery if the remote will not be used for a long period of time.
- Dispose of used batteries according to local regulations.
- If the remote does not respond, check that the battery is correctly installed and the contacts are clean.

REMOTE BATTERY PRECAUTIONS

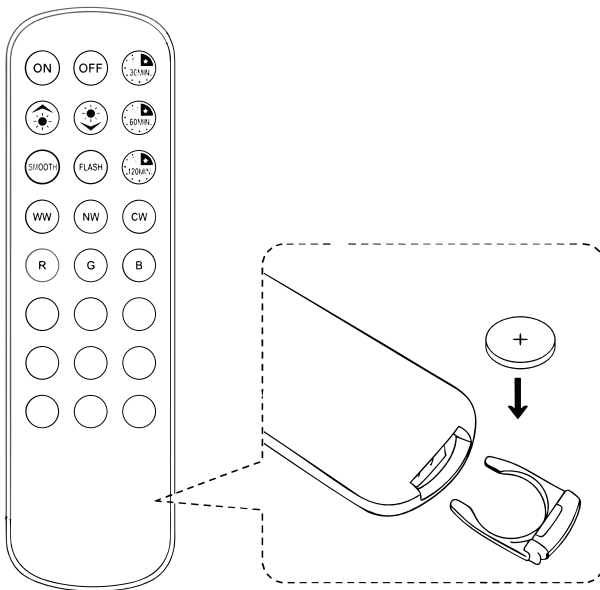

- Use only the coin cell battery type marked inside the remote control's battery compartment.
- Insert the battery with the correct polarity (+ / -).
- Keep the battery away from children and pets.
- If a coin cell battery is swallowed, it can cause serious injury or death. Seek medical attention immediately.
- Do not recharge, short-circuit, disassemble, crush, puncture, or expose the battery to heat or fire.
- Remove the battery if the remote will not be used for a long period of time.
- Dispose of used batteries according to local regulations.
- If the remote does not respond, check that the battery is correctly installed and the contacts are clean.

WARRANTY & CUSTOMER SUPPORT

ONE-YEAR LIMITED WARRANTY

WX-12 Rechargeable Wall Lamp

ARCWEISSO provides a one-year limited warranty from the date of purchase. The warranty covers defects in materials and workmanship under normal indoor use.

WHAT IS COVERED

- Manufacturing defects in the lamp, remote control, and included charging components.
- Functional failures that occur during normal, intended indoor use.

WHAT IS NOT COVERED

- Damage caused by misuse, improper installation, incorrect charging, accidents, unauthorized modification, or normal wear.
 - Damage caused by incompatible accessories or power supplies.
-

NEED HELP?

Email: support@ARCWEISSO.com

When contacting support, please include your order number, a brief description of the issue, and clear photos or a short video so we can assist you efficiently.

SERVICE REMINDERS

For indoor use only. Use screws and wall plugs suitable for the wall material. Keep this manual and your proof of purchase for future reference.

